




# Care Sterilizer

## M2 SERIES

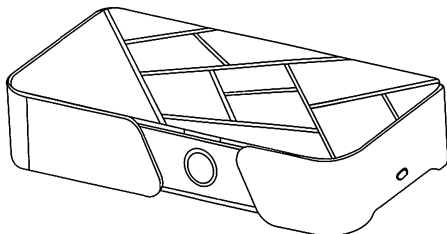

·Sterilizer  
·Charger

### Product Features:


1. With big ultraviolet lamp on two sides, 4 beads on the corners, 360 C sterilization. 10 minutes sterilizing, 5 minutes Secondary disinfection.
2. With USB outlet, sterilization function is available while charging the mobile phone.
3. With voice function, easy to operate. (Chinese and English switch)
4. With big capacity, suitable for most 7 inch mobile phone, pad, watch and jewelry.
5. With smart dimension and 5V low voltage. Portable and safe.
6. With wireless charging function, workable for iPhone and other Android mobile phones.

### HOW TO USE:

1. Plug it in and turn it on.
2. Press the button about 2 seconds to turn it on, and the voice prompts disinfection to start. (Voice mode switching, press and hold the button about 5 seconds to restart, Chinese and English voice automatically switch)
3. Open the lid, place the product to be sterilized, wireless disinfection at the same time, close the lid. The disinfection lamp lights up after 3 seconds. The sterilizing last about 10 minutes.
4. Voice prompt: Secondary disinfection begins, 4 beads on the corners will turn on, the sterilizing last about 5 minutes.
5. Voice prompt : Disinfection is completed; please feel free to use.

### Product Features:

|                         |                    |
|-------------------------|--------------------|
| Model                   | M2                 |
| Product size            | 225*123*45mm       |
| Voltage input           | DC5V-2.1A          |
| UVC material            | ozone quartz glass |
| Lamp power              | 0.5W               |
| Lamp voltage            | 450±15%V           |
| Lamp current            | 3mA                |
| Lamp band               | 253.7nm/185nm      |
| Lamp life               | 10000H             |
| Working temperature     | 0-50 C             |
| Speaker power           | 8W                 |
| Wireless charging power | 5W                 |

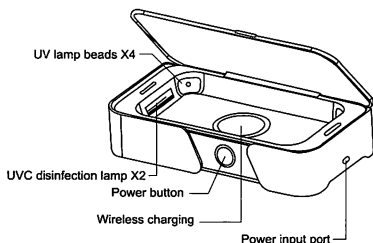

### SAFETY INSTRUCTIONS:

- Keep the unit far from flame, water and corrosive chemicals.
- Do not clean the unit with organic solvent.
- Do not stare at the ultraviolet lamp for long time.

